
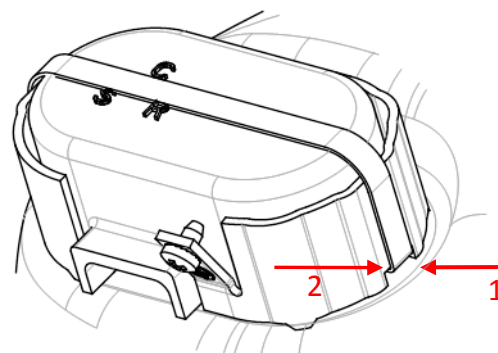


WIRING DIAGRAM	
SM18	NJ series 3-Phase

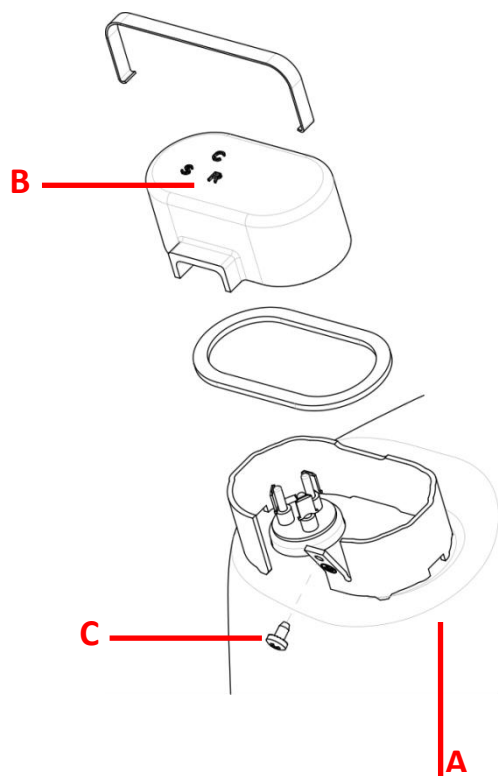



Legend

	Description		Description
A	Compressor		
B	Terminal Cover		
C	M 3,5x7 Ground Screw		



Cover Positioning and Locking

Press strongly on the side part of metallic spring as indicated by the arrow 1, until the locking is complete

The cover can be removed with a screwdriver by pulling the spring in the point as shown by arrow 2

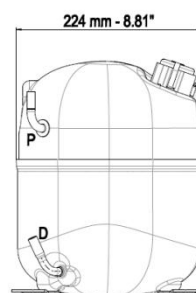
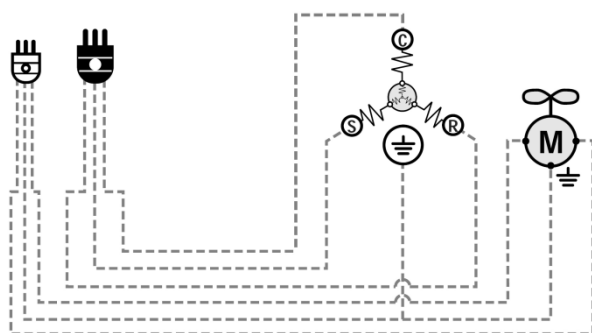


	Ø mm	Ø in	material
S - Suction	9.60 - 9.67	3/8	Cu
P - Process	12.77 - 12.85	1/2	Cu
D - Discharge	6.42 - 6.50	1/4	Cu
	8.00 - 8.08	5/16	Cu

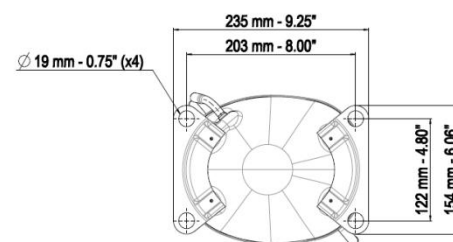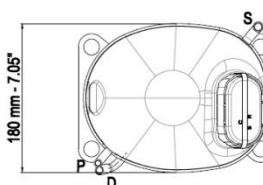

Note: After replacement, the compressor and it's accessories must be handled and recycled according to the material group directives (ferrous, non-ferrous, polymers, oils, ...). These recommendations are intended to minimize the adverse impacts that may be caused to the environment.

مخطط الأسلاك	
SM18	سلسلة NJ 3-Phase

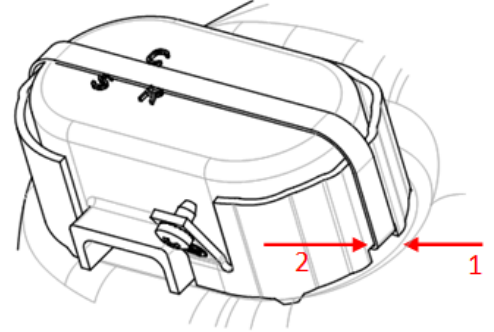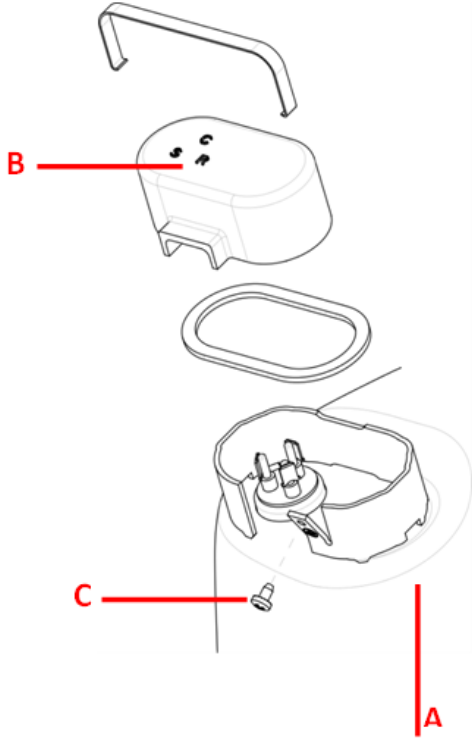




أسطورة

وصف	وصف
A	ضابط
B	غطاء الطرفي
C	برغي الأرضي M 3,5x7


موقع و قفل الغطاء

اضغط بقوة على الجانب الجانبي من النابض المعدني كما هو موضح بالسهم 1، حتى يكتمل القفل

يمكن إزالة الغطاء باستخدام مفك براغي عن طريق سحب النابض في النقطة كما هو موضح بالسهم 2

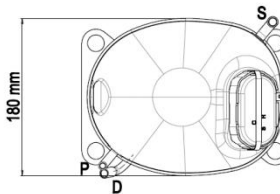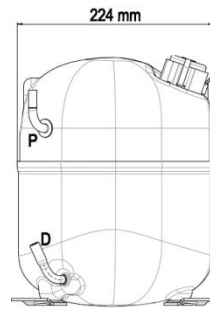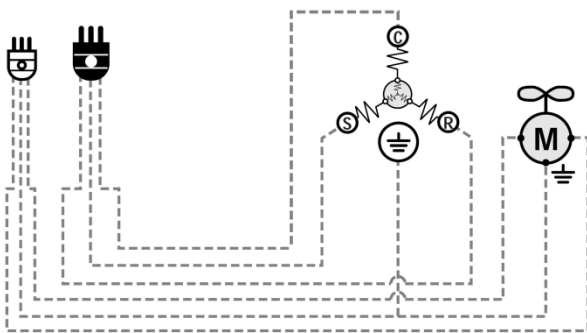

المواد	م م
S - مص	9.60 - 9.67
P - شحن	12.77 - 12.85
D - تفريغ	6.42 - 6.50
	8.00 - 8.08

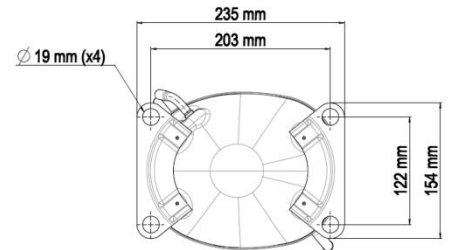

ملاحظة: بعد الاستبدال، يجب أن يكون للضاغط و لواحقه معالجة مناسبة، ويجب إعادة إسترجاع المكونات وفقا لمجموعة المواد (الحديدية، غير الحديدية، الزيوت، ...). تهدف هذه التوصيات إلى التقليل إلى أدنى حد من الآثار الضارة التي قد تلحق بالبيئة.